
PK110002 SH 020.13100

Lifting capacity diagram PK 110002-SH G PJ170 EJV1 DPS+

Subject to change, production tolerances have to be taken into account.

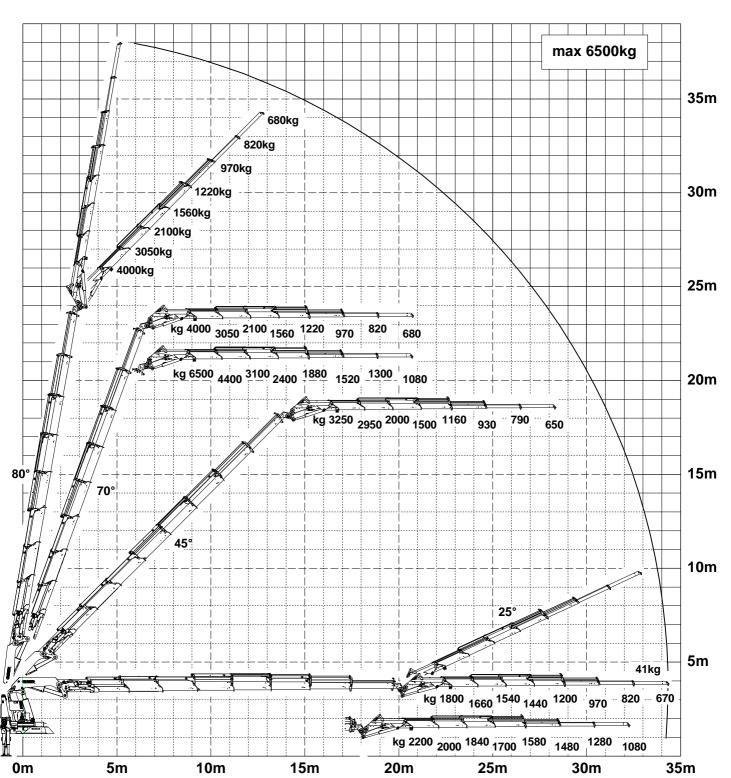



When using mechanical boom extensions, the loads shown on the charts need to be reduced by the weight of these extensions.

Symbolic crane figure, indications at 20° main boom position & load arm in horizontal position



0m

For Rope winch load capacity refer to page Page 020.20100